

Relax and Enjoy your new deck!





CUSTOMER SERVICE 1-866-LAST-DECK



Α

О N

N S

R

U

Ν

INSTALLATION

Last-Deck® Aluminum Decking

COMPONENTS:

STARTER STRIP



PLANKING



EDGE TRIM



SELF CUTTING #10 1 1/2" STAINLESS STEEL SQUARE HEAD FASTENER (NO PAINT)

SELF CUTTING
#8 1/2" STAINLESS
STEEL SQUARE HEAD
FASTENER
(COLOR MATCHED TO EDGE






TRIM)

INSTALLATION EASY AS 1-2-3!


STEP 1: STARTER STRIP

INSTALLATION OPTION 1A

STEP 2: PLANKING

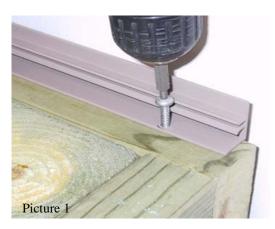


Hold *Starter Strip* next to house, Use #10 stainless steel fastener as shown in picture 1

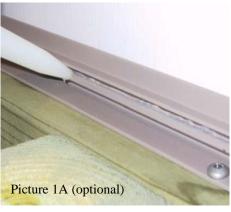

Optional Step: Apply clear silicone sealant (sold separately) in female groove as shown in picture 1A

The application of sealant can act as a sound deadening material to make your decking more quiet to walk on.


This can be repeated for all female joints throughout installation

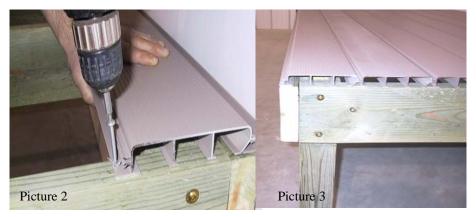

Install Deck Plank male flange into female starter strip, hold snug (self spacing), use #10 stainless steel fasteners at each joist to secure as shown in picture 2 Repeat until you reach the edge of the framing as in picture 3 Note: Should the last plank width be too great. Planking can be ripped to proper length with carbide saw blade using skill saw or table saw. The plank can then be fastened with a #10 Stainless steel fastener applied at an angle.

STEP 3: EDGE TRIM



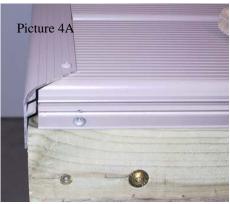

Edge Trim lengths allow 6" of extra material for miter cuts. Measure outside framing, for a typical 90 degree corner as shown in picture 4, adjust saw to 45 degree angle.

Once Trim is fitted fasten with #8 stainless steel hardware every 2 to 3 feet. As shown above in pictures 4 & 4A

Cutting tips: See picture 4B and 4C

CUTTING TIPS Picture 4B



Tape the face of the saw surface to avoid damage such as marring the surface of Edge Trim. As shown above

Turn Edge Trim upside down for safe cutting shown in picture 4B

Always clean up aluminum shavings after each cut. As shown here in picture 4C

CUTTING TIPS Picture 4C

Page 2 Page 3